



From Serial Number 450920001

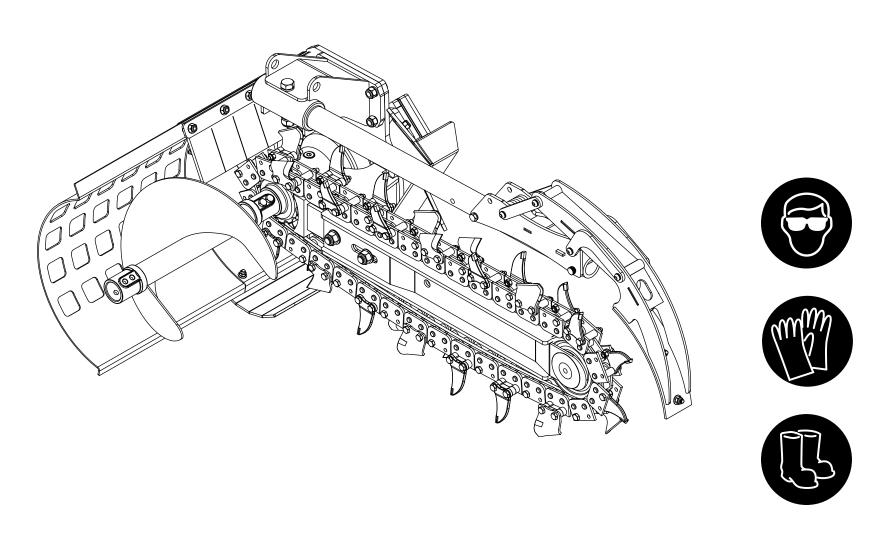

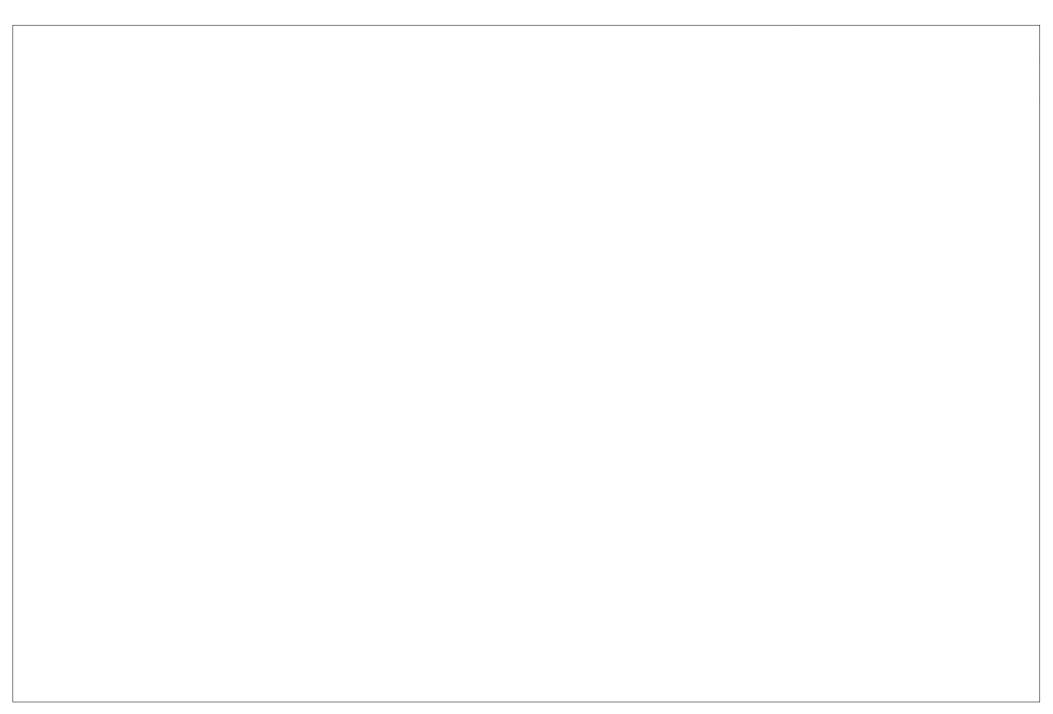



From Serial Number 450920001

FOREWORD

This document is the property of Auger Torque and the information contained herein is confidential to the company. The contents of the document must not be reproduced or disclosed wholly or in part, or used for purposes other than that for which it has been supplied, without the prior written permission of Auger Torque.

This manual has been written in the standard United Kingdom English Language. Auger Torque accepts no responsibility or liability for customer or any other third party translations of this manual into other languages, or for any incidents arising from such translation.

Auger Torque operates a policy of continuous product improvement, and actively encourages feedback on user manuals. If you wish to comment on the contents of this manual please send your comments using the feedback form provided. Please copy and complete the hard copy form on the back page of this manual.

SAFETY

Auger Torque Earth Drill Units have been designed for use with specific Auger Torque mounting frames, Augers, Auger extensions and Auger wear parts. Provided these are used and maintained correctly, they will provide a safe and reliable method of boring holes in the earth.

Use of this product following unauthorised modifications or repairs, use by untrained personnel, by implementing unsafe systems of work, by making modifications to product supplied or through operation in any manner not intended by Auger Torque could result in death, serious injury, damage to property or the product itself, and will invalidate any product validation or warranty. Auger Torque accepts no responsibility whatsoever for such modifications, repair or use.

WARRANTY

Auger Torque is not responsible for nor will accept any charges for work carried out by any unauthorised repairers. Charges, including those for spare parts, will not be accepted unless they have been authorised in writing by Auger Torque.

Any goods returned to Auger Torque by the customer, under warranty or for repair, must be freight paid unless authorised in writing by Auger Torque.

For full terms and condition see:-

www.augertorgue.com/about-us/warranties.html

CONTACT DETAILS

Please contact your local dealer / distributor via our website

www.augertorque.com/dealer-locator.html

Auger Torque Europe Ltd. Tel:+44 (0) 1451 861 652

Auger Torque Australia Pty Ltd. Tel: +61 (0) 7 3274 2077

Attachment Torque MFG(China) Co.,Ltd Tel: +86 (0) 574 88488181

Auger Torque Products Kinshofer USA Tel: +1 716 731 4333



From Serial Number 450920001

THE MACHINERY DIRECTIVE

The Machinery Directive 2006/42/EC (formerly 98/37/EEC) provides the harmonisation of the essential health and safety requirements for machinery, through a combination of mandatory health and safety requirements and voluntary harmonised standards. Such directives apply only to products that are intended to be placed on or put into service in the market for the first time.

The manufacturer or the authorised representative must draw up a 'Declaration of Conformity'.

Declaration of Conformity

Where Earth Drill Units are supplied in conjunction with Auger Torque manufactured mounting frames and Augers to form an Earth Drill Assembly, Auger Torque have control over the suitability of the parts supplied. To show this and meet with the lawful requirements of the Machinery Directive a Declaration of Conformity is issued and a CE mark is applied to the assembly.

SYMBOLS AND ABBREVIATIONS

The symbols that follow are used within this publication



Safety Glasses to be worn



Gloves/hand protection to be used



Safety shoes to be worn



Torque Tightening required



Thread treatment required



Refer to Interchangeability Chart



From Serial Number 450920001

ILLUSTRATED PARTS LIST.

- A The Illustrated Parts List helps the supply procedure and the identification of replacement component parts.
- B The Detailed Parts List is divided into seven columns:
 - The first column gives the item number of each detailed part contained in the illustration. An item number prefixed by a (-), shows that the item is not illustrated.
 - The second column gives the part number by which the item is identified.
 - The third column, gives the description of the component. The description will be preceded by one or more dots (•).
 - The fourth column gives the quantity of each item in the complete assembly.
 - The fifth column shows the torque tightening required for the item.
 - The sixth column shows the thread treatment required for the item.
 - The seventh column makes reference to any additional information required for the part or assembly.
- C Only those items with full dots (●) can be ordered as spares. Items with empty dots (eg ●o) are shown only for clarity of assembly and cannot be ordered as spares.

D When ordering spare parts please quote the serial number of the Earth Drill, which can be identified from the serial number plate on the top of the unit.

NOTE: Auger Torque will not accept any liability for incorrect parts that may be supplied because an incorrect serial number has been quoted.

The abbreviations that follow are used within this publication

AR As Required

BSP British Standard Pipe Thread

cc Cubic Centimeters

Kg Kilogrammes

_ Litres

LPM Litres Per Minute

Mm Millimeters

Nm Newton Meters

UNC Unified Coarse Thread


GPM Gallons Per Minute

G Gallons
lbs Pounds

ft-lbs Foot Pounds



From Serial Number 450920001

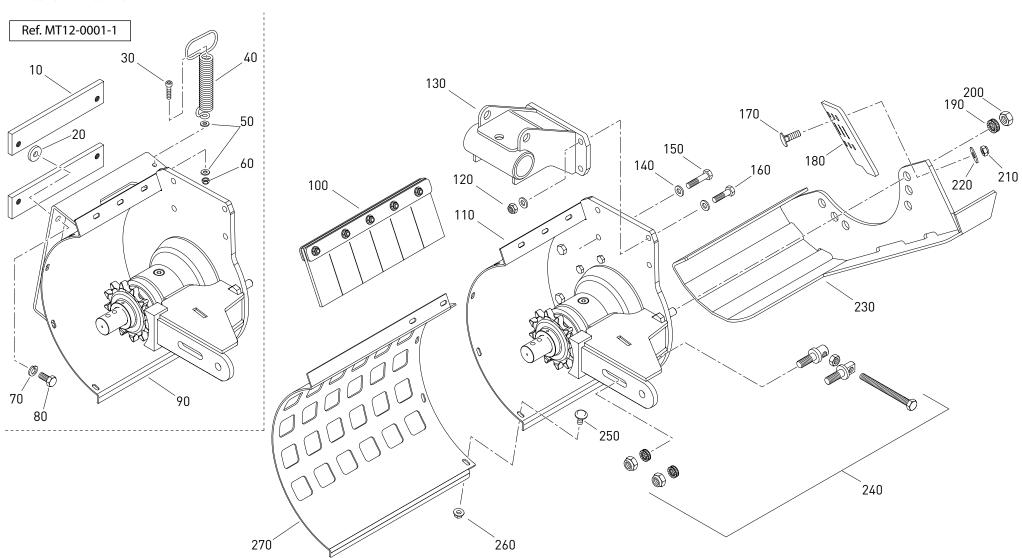




From Serial Number 450920001

ITEM	PART NO.	DESCRIPTION	QTY	TORQUE LOAD	THREAD TREATMENT	NOTES
10	45-1039	PLATE - CLAMP SIDESHIFT (SKIDSTEER)	2			
20	19-0053-43	SPACER - SIDESHIFT (SKIDSTEER)	4			
30	99-9134-035-Y	FIXING - SKT HD CAP M10 x 35 (12.9 Grade) (SKIDSTEER)	1			
40	99-7922	SPRING HOSE RETAINER (SKIDSTEER)	1			
50	99-9154-P	FIXING - M10 PLAIN "PENNY" WASHER (SKIDSTEER)	2			
60	99-9184	FIXING - M10 METRIC NYLOC NUT (SKIDSTEER)	1			
70	99-9166	FIXING - SPRING WASHER - M16 H/D (SKIDSTEER)	4			
80	99-9125-035	FIXING - M12 x 35MM - SETSCREW (8.8 Grade) (SKIDSTEER)	4			
90	45-1930	DRIVE SUB ASSEMBLY - (SKIDSTEER)	1			
100	45-1907	KIT-RUBBER FLAP/PLATE AND FIXINGS	1			
110	45-1929	DRIVE SUB ASSEMBLY - (EXCAVATOR/MINI LOADER)	1			
120	99-9186	FIXING - NUT NYLOC M16 (8.8)	4			
130	45-1912	DANGER BAR MTG. FAB	1			
140	99-9156	FIXING - WASHER - M16	8			
150	99-9126-075	• FIXING - M16 x 75MM - BOLT (8.8 Grade)	1			
160	99-9126-060	FIXING - M16 x 60MM - SETSCREW (8.8 Grade)	3			
170	99-9205-035	FIXING - M12X35 CUP SQ SETSCREW (DIN603)	2			
180	45-1045	SKID PLATE MT ADJUSTABLE CHAIN WIDTH 100-200	1			
190	99-9237	FIXING - WASHER ANTIVIBRATION NORD M20 -SP	2			
200	99-9177	FIXING - NUT PLAIN M20	2			
210	99-9185	FIXING - M12 METRIC NYLOC NUT	2			
220	99-9155-P	FIXING - PENNY WASHER - M12 - FORM G	2			
230	45-1901	SKID PLATE WELD ASSY	1			
240	42-1902	BOOM ADJUSTMENT KIT	1			
250	99-9204-025	FIXING - COACH BOLT M10 X 25 LONG (8.8 Grade)	4			
260	99-9194	FIXING - NUT FLANGED - M10	4			
270	45-1035	GUARD - BOLT-ON TRENCHER	1			
						Ref. MT12-0001-1



From Serial Number 450920001

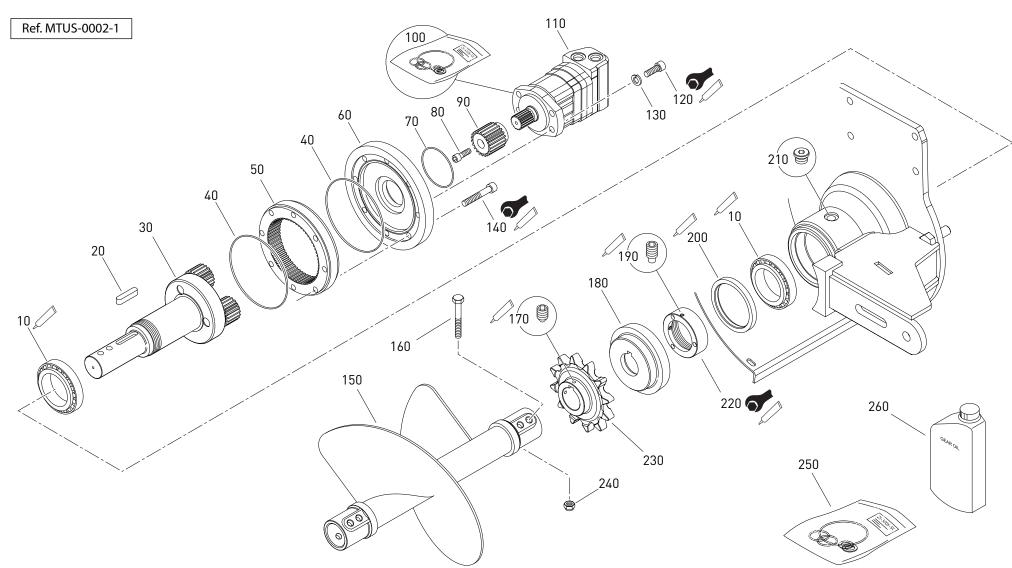




From Serial Number 450920001

ITEM	PART NO.	DESCRIPTION	QTY	TORQUE LOAD	THREAD TREATMENT	NOTES
10	99-1104	• TAPER BEARING 75mm (32015X)	2		LOCTITE 7471, 641	
20	42-1027	KEY-DRIVE SHAFT - ALL TRENCHERS	1			
30	21-3913	TRENCHER SHAFT ASSEMBLY - 3.86:1	1			
40	99-1532-V	• o O'RING - 162 x 3.0 (SERIES 3 RING)	2			See Seal Kit
50	21-3004	• RING GEAR - 60T - 2.5 MOD.	1			
60	21-3057	BTM INPUT - TRENCHER DIR. SUN GEAR	1			
70	99-1540-V	• O'RING - 86 ID x 2.5 DIAMETER (Motor seal)	1			See Seal Kit
80	99-9633-100	FIXING - 3/8" UNC X 1" LONG SOCKET CAP SCREW - BLACK	1			
90	21-3049	SUN GEAR - 21T - MOTOR MTG.	1			
100	25-2312	SEAL KIT - MOTOR	1			
110	25-2303	MOTOR - ATE 80cc - 14T SHAFT	1			
120	99-9135-035	FIXING - M12 x 35 SOCKET CAP SCREW (12.9 Grade)	4	89-99.5 ft-lbs	LOCTITE 243	
130	99-9165	FIXING - M12 SPRING WASHER	4			
140	99-9135-075	FIXING - M12 x 75 SOCKET CAP SCREW (12.9 Grade)	8	89-99.5 ft-lbs	LOCTITE 243	
150	42-1921	AUGER - DUAL HUB	1			
160	99-9115-090	• FIXING - BOLT - M12 x 90 - BOLT (10.9 Grade)	2			
170	99-9223-010	SETSCREW -CONE PT- M8 x 10	2		LOCTITE 243	
180	42-1017	SEAL PROTECTOR (70 Bearing output housing)	1			
190	99-9213-012	GRUB SCREW - M8X12 SQUARE POINT (14.9 Grade)	2		LOCTITE 243	
200	99-1504	• OIL LIP SEAL - (100 x120 x12)	1		LOCTITE 7471, 515	See Seal Kit
210	21-5071	1/2" BSP MAGNETIC PRESSURE PLUG	2			000000000000000000000000000000000000000
220	21-3019	LOCKING NUT M75	1	258 ft-lbs	LOCTITE 209125	
230	42-1033	SPROCKET - C/W Collar (MINI-T)	1	200 11 120	2001112207120	
240	99-9185	• FIXING - NUT NYLOC M12 (8.8 Grade)	2			
250	SK-21-390	SEAL KIT - GEARBOX - SERIES 3 - Comprising of items 40,70 &190	1			
260	99-8101	GEAR OIL - AGMA 6EP - MINERAL (1 Litre Bottle)	2			2.3 US pints
200	,, 0101	All units are supplied with 320 viscosity oil, except where the unit is to	_			2.5 00 piiito
		be or stored in extreme temperatures.				
	99-8104	GEAR OIL - AGMA 4EP - MINERAL When using or storing the units below -15°C				
	99-8106	GEAR OIL - AGMA 7EP - MINERAL When using or storing the units above 35°C				
	,, 0100	GEAR OIL AGNATED MINERAL WHICH doing of storing the units above 50 0				
	21-3993	KIT - DRIVE SUB ASSY - Comprising of items 10 to 80, 110 to 130 & 160 to 220	1			D.C.MTHC 0000 1
	2. 0,,0	- 1 22 338 A331 33	· '			Ref. MTUS-0002-1



From Serial Number 450920001

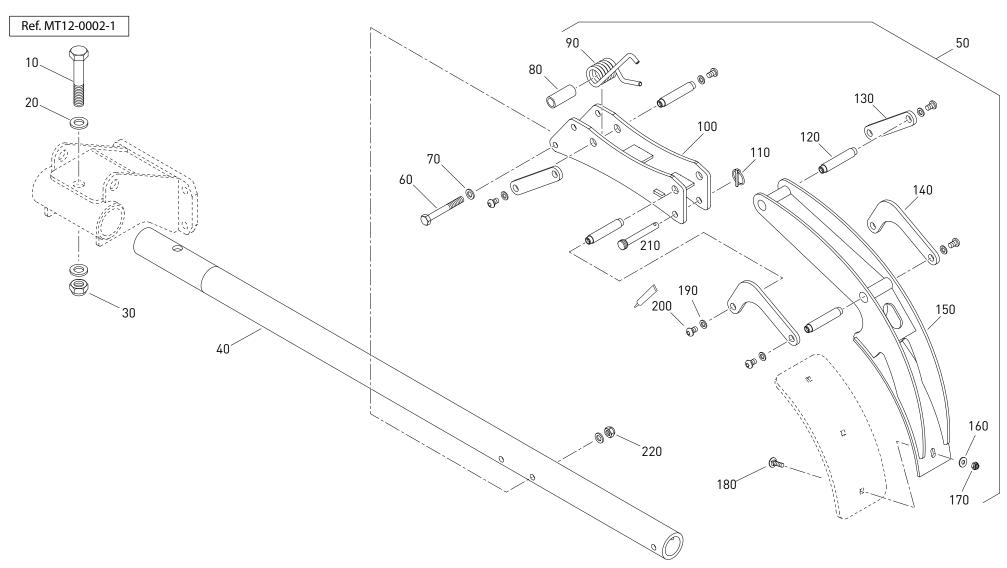




From Serial Number 450920001

ITEM	PART NO.	DESCRIPTION	QTY	TORQUE LOAD	THREAD TREATMENT	NOTES
10	99-9117-120	 FIXING - BOLT M20 X 2.5 X 120 LONG (8.8 Grade) 	1			
20	99-9157	FIXING - M20 PLAIN WASHER	2			
30	99-9187	FIXING - M20 METRIC NYCLOC NUT (8.8 Grade)	1			
40	45-1026	DANGER BAR TUBE	1			
50	45-1909	TRENCH CLEANER ASSEMBLY	1			
60	99-9115-100	• FIXING - BOLT - M12 x 100	1			
70	99-9155	FIXING - WASHER - M12	2			
80	42-1056	TUBE - SPRING BUSH	1			
90	43-1102	SPRING - TRENCHER CLEANER	1			
100	45-1902	TRENCH CLEANER- PIVOT FAB	1			
110	99-99021	• LINCH PIN - 3545 - 4.5 x 28 x 35	1			
120	42-1045	PIN - LINK PIVOT TAPPED	4			
130	42-1046	LINK PLATE - SHORT	2			
140	42-1047	PLATE - LONG LINK	2			
150	42-1913	MAIN ARM FAB. (TRENCHER CLEANER)	1			
160	99-9154-P	FIXING - M10 PLAIN "PENNY" WASHER	3			
170	99-9184	FIXING - M10 METRIC NYLOC NUT	3			
180	99-9204-035	FIXING - COACH BOLT M10 X 35 LG	3			
190	99-9154	FIXING - M10 PLAN WASHER	8			
200	99-9254-16	FIXING - M10 x 16 SKT HD BUTTON SETSCREW	8		LOCTITE 243	
210	42-1055	PIN - AUGER RETAINER	1			
220	99-9185	FIXING - M12 METRIC NYLOC NUT (8.8 Grade)	1			
						Ref. MT12-0002-1



From Serial Number 450920001

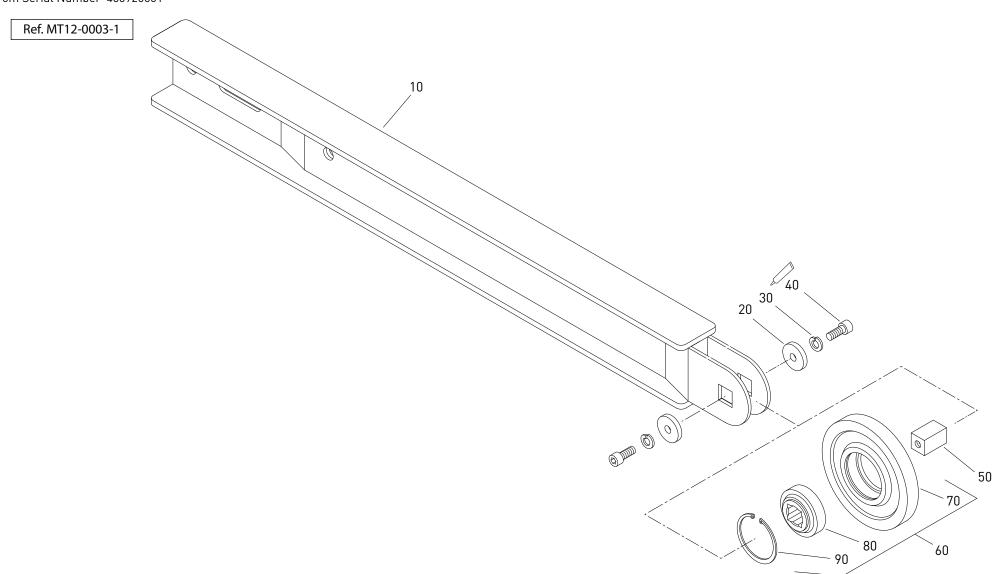




From Serial Number 450920001

ITEM	PART NO.	DESCRIPTION	QTY	TORQUE LOAD	THREAD TREATMENT	NOTES
10	42-1914	BOOM WELD ASSY	1			
20	42-1024	WASHER - TRENCHER BOOM NOSE	2			
30	99-9165	FIXING - SPRING WASHER - M12 H/D	2			
40	99-9135-030	FIXING - SKT HD CAP M12 x 30	2		LOCTITE 243	
50	42-1025	PIN SQUARE - NOSE ROLLER (INC MAT'L)	1			
60	42-1900	NOSE ROLLER ASSY	1			
70	42-1026	ROLLER - BOOM NOSE	1			
80	99-1207	BEARING - TRENCHER NOSE ROLLER (W208PP5)	1			
90	99-1603	CIRCLIP - INTERNAL - NOSE ROLLER- 80mm INT.	1			
						Ref. MT12-0003-1



From Serial Number 450920001

Ref. MT-0005-1

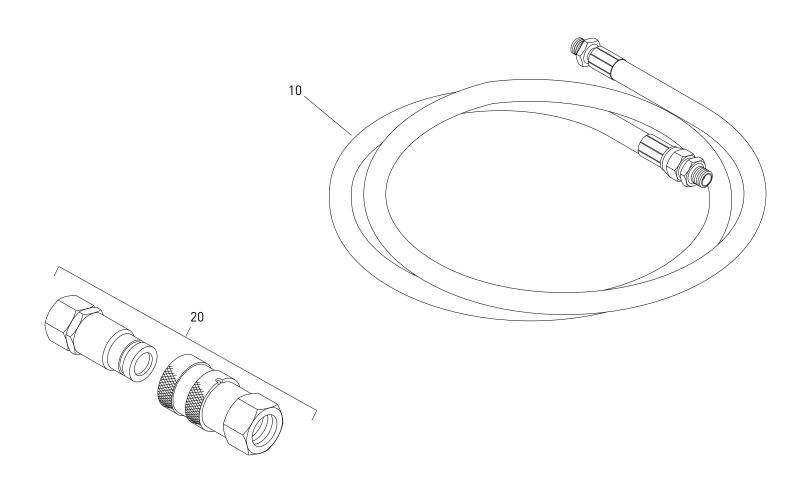




From Serial Number 450920001

ITEM	PART NO.	DESCRIPTION	QTY	TORQUE LOAD	THREADLOCKER	NOTES
10	99-7504	• HOSE - 1.8M 1/2" BSP Str/Str	2			
20	99-7052-M/F	• QRC'S - 1/2" FF	1			
						Ref. MT-0005-1



From Serial Number 450920001

Ref. MT12-0004-1

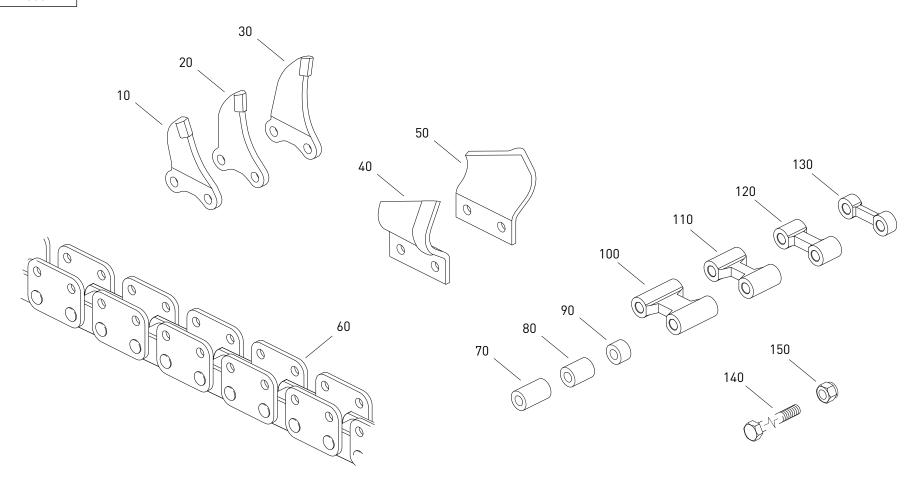




From Serial Number 450920001

TEM	PART NO.	DESCRIPTION	QTY	TORQUE LOAD	THREAD TREATMENT	NOTES
10	44-2003	TOOTH - MINI-T RIGHT HAND TUNGSTEN	1			
20	44-2002	TOOTH - MINI-T CENTRE TUNGSTEN	1			
30	44-2001	TOOTH - MINI-T LEFT HAND TUNGSTEN	1			
40	44-2011	TOOTH - MINI-T RIGHT HAND EARTH	1			
50	44-2010	TOOTH - MINI-T LEFT HAND EARTH	1			
60	44-2026	• CHAIN - 82 LINKS (1200 DEEP)	1			
70	44-2027	CHAIN SPACER - 38.5 LONG	1			
80	44-2028	CHAIN SPACER - 30.0 LONG	1			
90	44-2029	CHAIN SPACER - 15.3 LONG	1			
100	44-2034	SPACER BLOCK - 50mm WIDE	1			
110	44-2033	SPACER BLOCK - 37.5mm WIDE	1			
120	44-2032	SPACER BLOCK - 25mm WIDE	1			
130	44-2031	SPACER BLOCK - 12mm WIDE	1			
140	99-9124-025	FIXING - SETSCREW - M10 x 25mm	1			
	99-9124-030	FIXING - SETSCREW - M10 x 30mm	1			
	99-9114-040	FIXING - BOLT - M10 x 40mm	1			
	99-9114-050	FIXING - BOLT - M10 x 50mm	1			
	99-9114-055	FIXING - BOLT - M10 x 55mm	1			
	99-9114-060	FIXING - BOLT - M10 x 60mm	1			
	99-9114-065	FIXING - BOLT - M10 x 65mm	1			
	99-9114-070	FIXING - BOLT - M10 x 70mm	1			
	99-9114-075	FIXING - BOLT - M10 x 75mm	1			
	99-9114-080	FIXING - BOLT - M10 x 80mm	1			
	99-9114-090	FIXING - BOLT - M10 x 90mm	1			
	99-9114-100	FIXING - BOLT - M10 x 100mm	1			
	99-9114-110	FIXING - BOLT - M10 x 110mm	1			
	99-9114-120	FIXING - BOLT - M10 x 120mm	1			
	99-9114-200	FIXING - BOLT - M10 x 200mm	1			
	99-9114-210	FIXING - BOLT - M10 x 210mm	1			
	99-9114-230	• FIXING - BOLT - M10 x 230mm	1			
	99-9114-250	• FIXING - BOLT - M10 x 250mm	1			
	99-9114-260	• FIXING - BOLT - M10 x 260mm	1			
	99-9114-280	• FIXING - BOLT - M10 x 280mm	1			
	99-9114-290	• FIXING - BOLT - M10 x 290mm	1			
150	99-9184	FIXING - NUT NYLOC M10	1			
						Ref. MT12-0



From Serial Number 450920001

Ref. MT12-0005-1

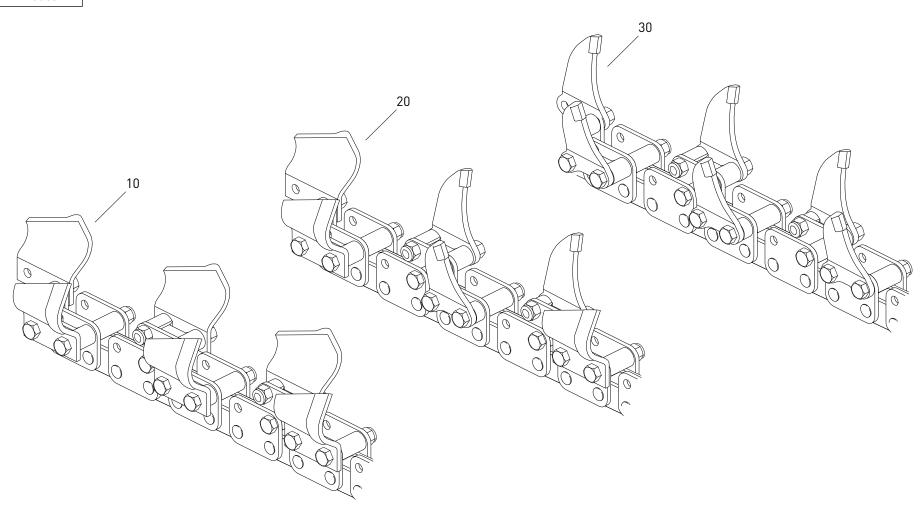




From Serial Number 450920001

10		DESCRIPTION	QTY	TORQUE LOAD	THREAD TREATMENT	NOTES
111	44-2924	• CHAIN - 1200 x 100 EARTH	1			
10	44-2923	• CHAIN - 1200 x 150 EARTH	1			
	44-3925	• CHAIN - 1200 x 200 EARTH	1			
20	44-2925	• CHAIN - 1200 x 100 COMBI	1			
	44-2922	• CHAIN - 1200 x 150 COMBI	1			
	44-3926	• CHAIN - 1200 x 200 COMBI	1			
30	44-2926	• CHAIN - 1200 x 100 TUNGSTEN	1			
	44-2920	• CHAIN - 1200 x 150 TUNGSTEN	1			
	44-3927	• CHAIN - 1200 x 200 TUNGSTEN	1			
						Ref. MT12-00



From Serial Number 450920001

Ref. MT12-0006-1

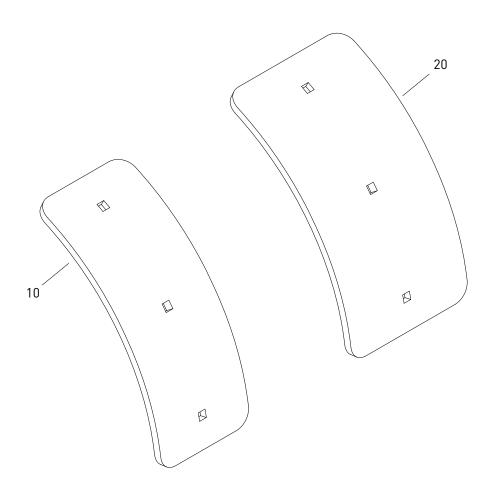

Doc No: 99-95451902-REV-01 Date: 19 October 2015 Page 20




From Serial Number 450920001

ITEM	PART NO.	DESCRIPTION	QTY	TORQUE LOAD	THREAD TREATMENT	NOTES
10	42-1058	• SCRAPER - MT - 332 x 130 FOR 150MM CHAINS	1			
20	42-1030	SCRAPER - MT - 332 x 180 FOR 200MM CHAINS	1			
						Ref. MT12-0006-1



From Serial Number 450920001

Ref. MT48-0001-1

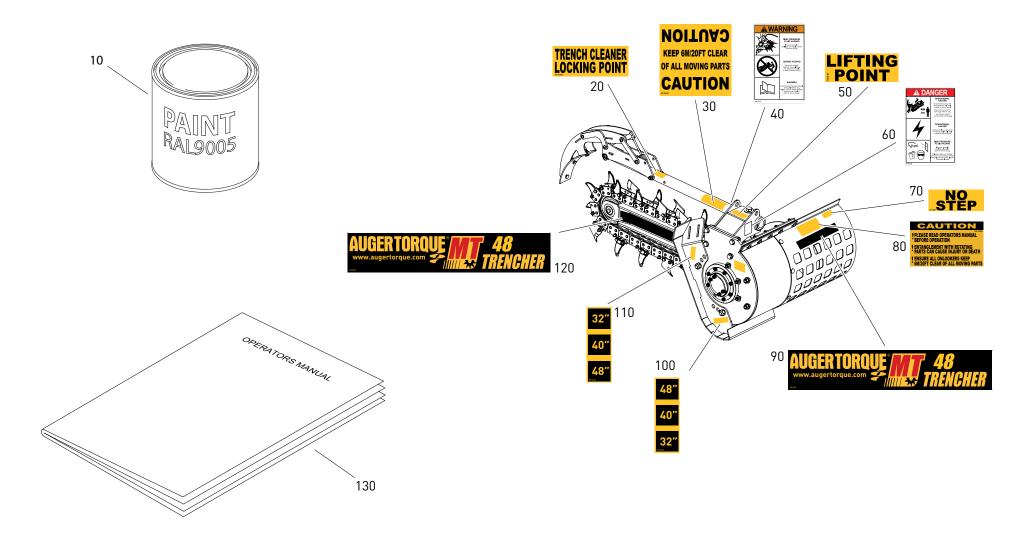



From Serial Number 450920001

TEM PART N	O. DESCRIPTION	QTY	TORQUE LOAD	THREAD TREATMENT	NOTES
10 99-8002	PAINT - BLACK RAL9005 0.5L	1			
20 99-5084	LABEL - TRENCH CLEANER LOCKING POINT	1			
30 99-5082	LABEL - CAUTION				
40 99-5309	LABEL - US WARNING				
50 99-5083	LABEL - LIFTING POINT	.			
50 99-5308	LABEL - US DANGER				
70 99-5085	LABEL - NO STEP				
30 99-5086	LABEL - CAUTION TEXT	'1			
99-5252	LABEL - MT48 - MODEL				
00 99-5243	LABEL - TRENCHER DEPTH	'			
110 99-5242	LABEL - TRENCHER DEPTH	'1			
120 99-5252	LABEL - MT48 - MODEL	2			
77-3232	• LABLE - MIT40 - MODEL				
130 99-95-400	0001 • OPERATOR'S MANUAL - ENGLISH	1			
					Ref. MT48-0





From Serial Number 450920001

Auger Torque Publication Feedback Form						
Please copy this form and when complete return to the address below						
	Your Contact Details	Please enter your feedback in the field below :-				
Name :-						
Address :-						
Telephone :-						
Email :-						
Publication Number						
Publication Title						
Issue/Rev Number						
Auger Torque Products Kinshofer USA						
6420 Inducon Drive						
Suite G Sanborn, NY, 14132						
USA Phone (+1) 716 731 4333						
	Fax (+1) 71					
	Email sales@auge	ertorqueusa.com				